




SINGLE-PLY: TPO 60-80 mil membranes

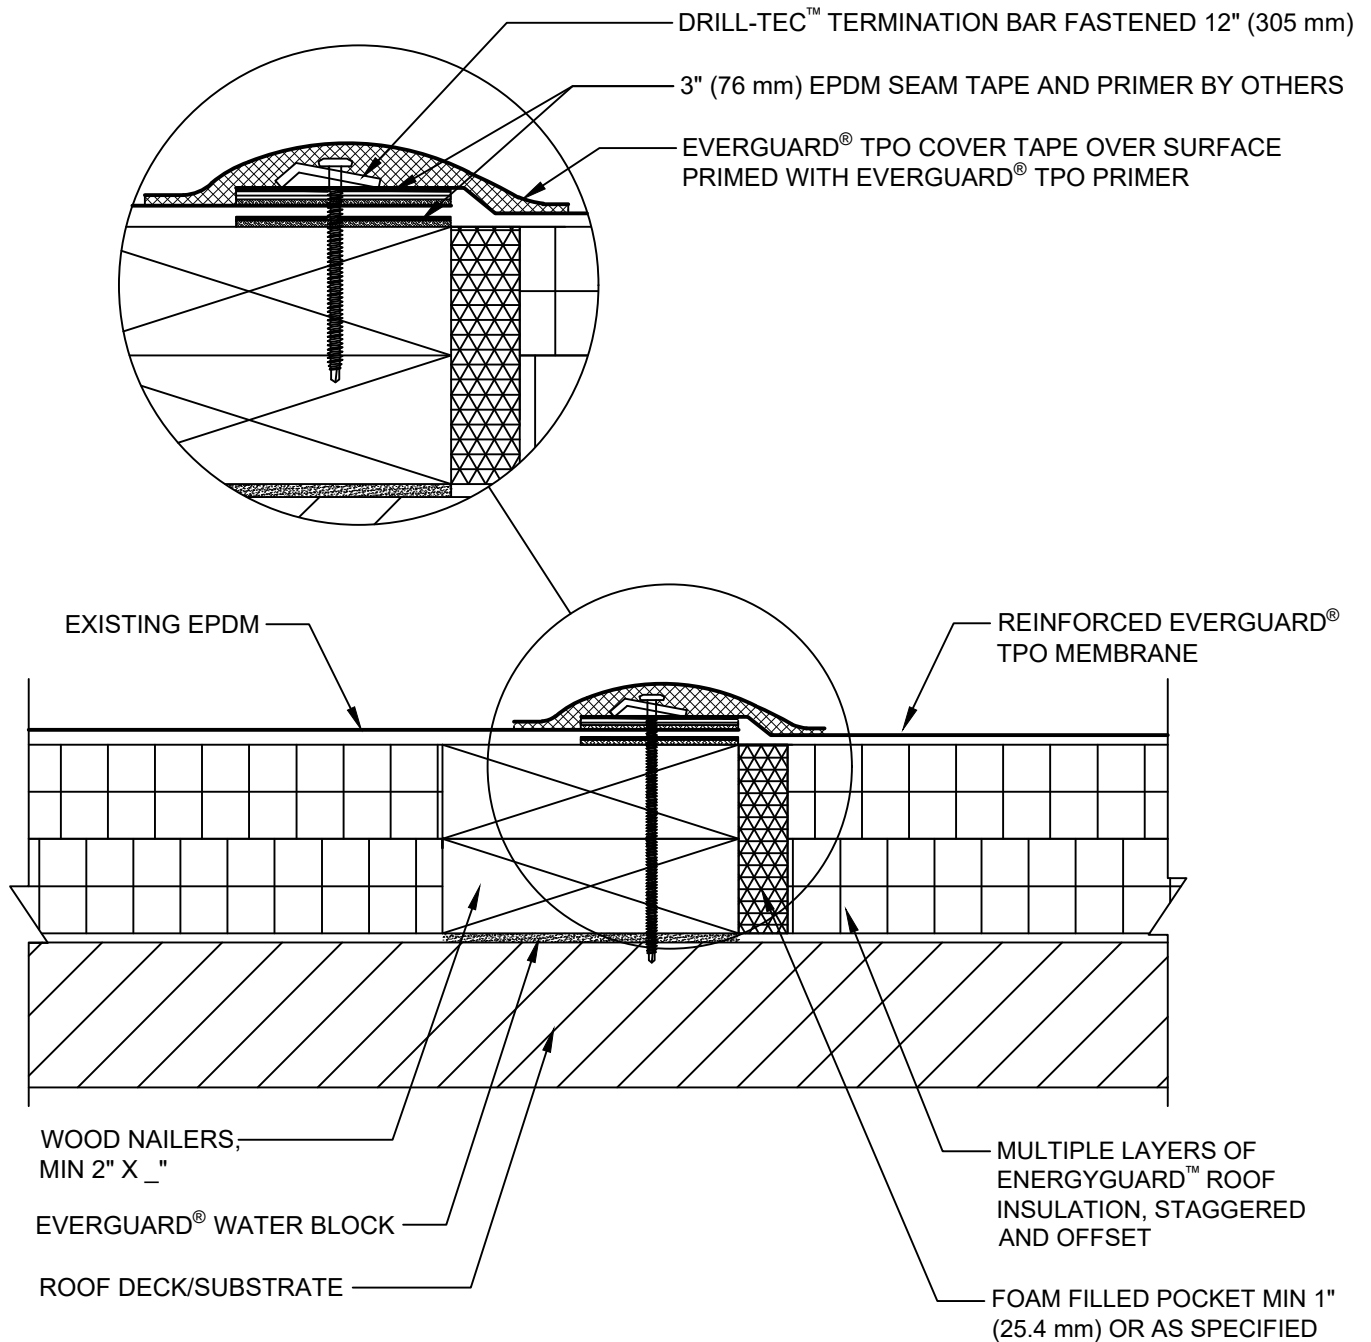

NOTE:

1. GAF DOES NOT GUARANTEE THE WATERTIGHT INTEGRITY OF TIE-INS TO OTHER MEMBRANE ROOF SYSTEMS.
2. WOOD BLOCKING MUST BE SEALED TO THE DECK. IF STEEL DECK, ALL LOWER FLUTES MUST BE SEALED TO PREVENT WATER FROM GOING PAST THIS DETAIL UNDER THE ROOF.
3. FOR STEEL ROOF DECKS: FILL STEEL DECK FLUTES WITH SPRAY FOAM INSULATION PRIOR TO THE INSTALLATION OF ABOVE DECK INSULATION A MINIMUM OF 12 INCHES (305 mm) FROM WOOD NAILER ON NEW TPO SIDE OF ROOF.



TPO TO EXISTING EPDM - NONADHERED


DRAWING #
609C

THIS DETAIL APPLIES TO:
ADHERED SYSTEMS
MECHANICALLY ATTACHED SYSTEMS
RHINOBOND® SYSTEMS

ISSUE / REVISION DATE
4/6/21

SCALE
N.T.S.

LEGEND

-  EVERGUARD® WATER BLOCK
-  EVERGUARD® BONDING ADHESIVE